# **DATA SHEET** SINGLE LANCES



Stainless Steel Model:

32042

Zinc Plated Models:

## 31017, 32031, 32032, 32036

### Zinc Plated **32264, 32268, 36267, 36269** Models:

(Without Nozzle Holder)



#### FEATURES


- Ventilated square nylon insulator provides comfort and safety during operation.
- Suitable for hot or cold water cleaning.
- Durable two-piece nozzle protector reduces nozzle clogging and damage.
- Zinc plated and 304 stainless steel construction allow for flexibility in cleaning.



#### FEATURES

- · Molded insulator eliminates assembly and adjustment.
- Light-weight molded lance ensures an excellent grip and optimum control.
- Optional lengths available for flexibility and specialized cleaning.

SPECIFICATIONS		U.S.		Metric		
Stainless Steel N	lodel: 3	3204	2			
Maximum Flow			10.5 gpm		40 lpm	
Maximum Pressure		3650 psi			250 bar	
Maximum Temperature			320° F		160° C	
Inlet Fitting			1⁄4" NPT(M)		1⁄4" NPT(M)	
Nozzle Holder			1⁄4" NPT(F)		1⁄4" NPT(F)	
Length		36"			900 mm	
Weight		20.7 oz		0.59 kg		
Zinc Plated Mod	els: 310	017, 3	32031, 3203	2, 32	2036	
Maximum Flow		10.5 gpm		40 lpm		
Maximum Pressure		3650 psi		250 bar		
Maximum Temperature		320° F		160° C		
Inlet Fitting (32036 Only)		1⁄4" NPT(M)		1⁄4" NPT(M)		
Inlet Fitting		1/4" BSP(M)		1/4" BSP(M)		
Nozzle Holder			1⁄4" NPT(F)		1⁄4" NPT(F)	
Length/Weight	3101	17	32031	3	32036	32032
	27"		36"		36"	48"
Length	700 m	nm	900 mm	9	00 mm	1200 mm
Weight	19.5 oz		23.1 oz	20.8 oz		34.2 oz
0.55		kg 0.65 kg 0.59		).59 kg	0.97 kg	
Square Molded 2	Zinc Pla	ted l	Models: 322	<b>64,</b> 3	32268, 3	6267, 3626
Maximum Flow		10.5 gpm			40 lpm	
Maximum Pressure		3650 psi			250 bar	
Maximum Temperature		320° F			160° C	
Inlet Fitting		1⁄4" NPT(M)		1⁄4" NPT(M)		
Discharge Fitting		1⁄4" BSP(M)		1⁄4" BSP(M)		
Length/Weight	3226	54	36267	3	32268	36269
Length	24"		36"	48"		60"
Length	600 mm		900 mm	1200 mm		1500 mm
Weight 13.9 oz 0.39 kg					28.5 oz ).80 kg	35.7 oz 1.01 kg
	0.09	·ч	0.55 Kg			1.01 Kg

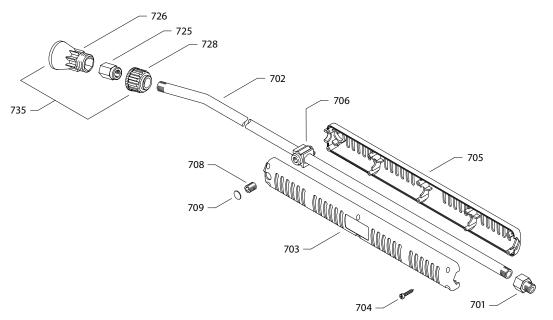

Model 31017 Shown

ITEM	PART N	UMBER	DESCRIPTION	QTY
701	32868	BB	Fitting (¼" BSP[M])	1
702	_	ZP	Tube (600–800 mm)	1
	_	S	Tube (700–1050 mm)	1
703	_	NY	Cover, Lance (Left)	1
704	_	STZP	Screw, Self Tapping (M3.5 x 18)	6
705	_	NY	Cover, Lance (Right)	1
706	_	NY	Adapter, Side Grip	1
708	32870	STZP	Screw, Cover (M10)	1

ITEM	PART N	UMBER	DESCRIPTION	QTY
709	—	NY	Plug	1
722	32698	NY	Side Grip (Not Shown)	1
725	32053	STZP	Holder, Nozzle (¼" NPT[F] x ¼" NPT[F] )	1
726	_	NY	Protector, Nozzle	1
728	—	NY	Collar, Protector	1
735	31169	NY	Assembly, Protector, Nozzle (Includes: 726, 728)	1
736	32865	_	Assembly, Insulator (Includes: 703–706, 708, 709)	1

Italics are optional items. MATERIAL CODES (Not Part of Part Number): BB=Brass NY=Nylon S=304SS STZP=Steel/Zinc Plated ZP=Zinc Plated

#### TROUBLESHOOTING

Water leaking at fitting connection	Check fitting for proper sealant and reconnect to gun
Water leaking at nozzle	Check nozzle holder for proper sealant     and reconnect
Broken nozzle protector	• Replace

#### **SELECTION**

Select a lance that matches the system flow and pressure to ensure safety during operation. Select standard zinc-plated or 304 stainless steel for compatibility and longer life.

#### INSTALLATION

Install these single lances onto any  $\frac{1}{4}$  fitted gun. Use PTFE thread tape or pipe thread sealant to ensure an air-tight fit. Hand tighten until no leaking is visible.

#### **OPERATION**

Flow goes through the lance as soon as the trigger on the gun is squeezed.

#### A WARNING

**SKIN PUNCTURE HAZARD** 

Do not allow spray to contact any part of the body or animals. Pumped liquids under high pressure can pierce skin and underlying tissue or can deflect debris leading to serious personal injury or death.

1. Relieve all line pressure in the inlet line to the pump and discharge line from the pump before performing any maintenance on the gun.

- 2. When high-pressure gun is not in use, set safety trigger lock (safety latch) to avoid accidental high-pressure operation and personal injury or property damage.
- 3. Do not check for leaks with hand. Use a piece of cardboard to check for leaks.
- 4. Review cleaning procedures to minimize heavy back blasting.
- 5. Wear adequate safety equipment and clothing when operating a high-pressure sprayer. Never use high-pressure spray with bare feet or exposed skin, and always wear safety glasses.

#### ▲ CAUTIONS AND WARNINGS

All high-pressure systems require a primary pressure regulating device (e.g. regulator, unloader) and a secondary pressure relief device (e.g. pop-off valve, relief valve). Failure to install such relief devices could result in personal injury or damage to pump or property. Cat Pumps does not assume any liability or responsibility for the operation of a customer's high-pressure system. Read all CAUTIONS and WARNINGS before commencing service or operation of any high-pressure system. The CAUTIONS and WARNINGS are included in each Service Manual and with each Accessory Data sheet. CAUTIONS and WARNINGS can also be viewed online at www.catpumps.com/dynamic-literature/cautions-and-warnings or can be requested directly from Cat Pumps.

#### WARRANTY

 $View \ the \ Limited \ Warranty \ online \ at \ www.catpumps.com/literature/cat-pumps-limited-warranty$